

LX7 PAGER ACCESSORIES AND SPARE PARTS

ITEM	ITEM NAME	ITEM PN	ITEM	ITEM NAME	ITEM PN
	Bungee band 25 cm	227.9820		LX7 charging cradle with USB connection cable (without power supply)	247.9911
	Chain 35 cm	227.9800		Desktop charger with ext. antenna connector, alarm relay connector, USB cable (without power supply)	247.9910
	Belt holster, black	247.9902		Multi-charger, 5 pagers	247.9912
	Weatherproof nylon bag with magnetic closure and belt loop	230.9930		3x battery slot charger	261.0800
	Leather case KlickFast	247.9903		Antenna VHF, SMA-M, 41 cm	261.9000
	Belt clip dock KlickFast	260.9925		Antenna UHF, SMA-M, 18cm	261.9010
	Belt dock 38 mm KlickFast	260.9927		Programming set, travel	247.9800
	Belt dock 50 mm KlickFast	260.9928		Programming set, desktop	247.9900
	Leather dock loop KlickFast	260.9929	SPARE PARTS		
	Wallmount charger adapter, USB	247.9901		Rechargeable battery	260.9905
	LX7 Connection cable (without power supply)	247.9905		Rechargeable battery compartment cover	GGM247.03.01

- Specifications are subject to change without notice to improve reliability, function, or design.
- Original Oelmann paging radio base stations with gateways to external telecommunication networks, as well as scalable operator's messaging software, are available.