

RECOMMENDATIONS AND GUIDELINES FOR CLEANING OELMANN PAGERS AND PERIPHERAL DEVICES

03.2022 Springe, Oelmann Elektronik GmbH

Applies to: LX2, LX4, LX7, LX8, TETRA and WiFi Series pagers.

Oelmann pagers are made with a variety of materials, and each material might have specific cleaning requirements.

HERE ARE TIPS THAT APPLY TO ALL PAGERS:

1. Unplug all external power sources, devices, and cables.
2. Gently wipe the surfaces of your Oelmann pager, such as the display, buttons, and other exterior surfaces.
3. Pagers can remain ON while wiping.
4. Make sure the pager is completely dry before use.

Notes:

- Use a soft, lint-free cloth. Avoid abrasive cloths, towels, paper towels, or similar items.
- Avoid excessive wiping, which might cause damage.

IMPORTANT:

- Don't get moisture into any openings.
- Don't use aerosol sprays, bleaches, or abrasives.
- Don't spray cleaners directly onto the device.
- Keep liquids away from the device.
- Avoid getting moisture in any opening, and don't submerge Oelmann pager in any cleaning agents.
- Don't use on fabric or leather surfaces.

USE A DISINFECTANT ON AN OELMANN PAGER

Using a 70% isopropyl alcohol wipes, any EPA-registered chemicals wipes, or the wipes with Accelerated Hydrogen Peroxide (AHP). **Don't use bleach.**

CLEANING THE PAGER ACCESSORIES

- Belt holster, charger: same as above to wipe them down.
- Make sure they're completely dry before use.

Notes for LX2/4/8 Series pager chargers:

- Wipe the inside of the with care.
- Do not spill liquid into the devices.
- Do not damage the pin contacts.

HOW OFTEN TO CLEAN THE PAGER

It is safe to clean a pager daily.

WARRANTY NOTES

If liquid makes its way inside your Oelmann product then do not use it, and get help from an Oelmann Authorized Partner or Oelmann Elektronik GmbH direct as soon as possible. Liquid damage isn't covered under the Oelmann product warranty.